

FORD RANGER PY 07/2022-CURRENT

STORAGE DRAWER SYSTEM

FITTING INSTRUCTIONS

PART NO. 41013-41015



MSA
4X4 ACCESSORIES



MSA4X4.COM.AU | GEAR FOR LIFE

CONGRATULATIONS

ON PURCHASING A QUALITY MSA 4X4 STORAGE DRAWER SYSTEM

Years of design, development and manufacturing knowledge goes into every MSA 4X4 product to ensure that our products are the very best they can be!

Established in 2000, MSA 4X4 Accessories are the 4WD market leaders in quality Canvas products which include Certified ADR Compliant Canvas Seat Covers, Rear Wheel Bags, Rear Wheel Rubbish Bins, Vehicle Organisers and more.

We pride ourselves on our innovative products which include the world first, revolutionary Fridge Dropslide, the new patent pending Explorer Aluminium Storage Drawer System which delivers a whole new level of access to the drawer contents, the original Water Bra, fully adjustable air lumbar support systems, and an extensive range of 4x4 accessories that have stood the test of time.

As testament to our innovative culture, we have been awarded 19 patents in Australia & Internationally across our range of products including innovations currently within the patent process. We are a growing team with a vast knowledge of what works and what doesn't work out in the real world and constantly strive to deliver the highest quality product to our customers. We treat every product design with fear of failure in mind, ensuring our products are always the very best they can be. All our products are designed to be as simple as possible to use and are supported by our MSA 4X4 Lifetime Guarantee.

Our products are available through a network of over 600 stockists Australia wide.



TABLE OF CONTENTS

- 2** CONGRATULATIONS
- 4** GETTING STARTED
- 5** IMPORTANT INFORMATION
- 6** FITTER'S QUICK INSTALLATION GUIDE
- 8** DRAWER MODULE FITTING DIAGRAM
- 9** WING BRACKET POSITIONS
- 10** DRAWER PREPARATION
- 11** STORAGE DRAWER MODULES INSTALLATION
- 17** DRAWER REMOVAL AFTER INSTALLATION
(After the Drawers have been completely installed)
- 18** CARE, MAINTENANCE AND OPERATING INSTRUCTIONS
- 19** LIFETIME WARRANTY



GETTING STARTED

WHAT COMES IN THE BOX:

- 1 x DRAWER MODULE
- 2 x KEYS (*located inside each Drawer Module*)
- 1 x WING AND FIT KIT BOX (*if ordered*)
- 1 x DOUBLE DRAWER JOINING KIT (*if ordered*)
- 1 x CRASH TEST CERTIFICATE
- 1 x JOINING WIRE (*if left+right Drawers ordered*)

INQUIRIES CONTACT: warranties@msa4x4.com.au



IMPORTANT INFORMATION

It is important that you read and understand the below information before installing your new MSA 4X4 Storage Drawer System.

MAINTAINING ADR COMPLIANCE OF YOUR STORAGE DRAWER SYSTEM

MSA 4X4 Storage Drawer Systems have been legally crash tested and are supplied as an ADR compliant drawer module and fit kit system when the correct number fit kits are used for the installation and joining of the **Drawer Modules**. Failure to use a matching fit kit or components for the particular vehicle installation or the use of other components to install **MSA 4X4 Storage Drawer System** may void the ADR compliance of the **Storage Drawer System** and/or the warranty.

UNDERSTANDING DIFFERENCES BETWEEN LEFT AND RIGHT HAND SIDE MODULES

RHS - Driver's Side | LHS - Passenger's Side

MSA 4X4 Storage Drawer System are of a modular design, they do come in left and right hand side **Modules** as the need for wires and switches must enter the frame from one side. The **Drawer Modules** are clearly marked '**Left**' and '**Right**' on the packaging boxes. On the right (RHS) **Drawer**, the wiring and the LED light switch is on the RHS of the **Drawer**. On the left (LHS) **Drawer** the wiring and switch is on the LHS of the **Drawer**.

FRONT AND REAR DEFINITIONS FOR FITTING INSTRUCTION PURPOSES

The '**Front**' is related to the front face of the **Storage Drawer System**, where the lock is located (*towards the rear of the vehicle*). The '**Rear**' is related to the rear of the drawer system (*towards the front of the vehicle*).

MAINTAINING ADR COMPLIANCE OF YOUR CHILD RESTRAINTS*

ADR Compliant Child Restraint Points are installed as standard in **MSA 4X4 Storage Drawer Systems**. The anchor point bolt for the **Child Restraint** is marked on the rear of the **Drawer**. This is the second bolt down from the top. The bolt installed is an **M8 x 30mm High Tensile Bolt**, please use this bolt for child restraint anchors. Do not replace this bolt as it will result in the child restraint anchor not being ADR compliant.

MAINTAINING ADR COMPLIANCE WHEN INSTALLING A MSA 4X4 CARGO BARRIER*

The top two bolts on the passenger side of the rear frame can be used as mounting points for an **MSA 4X4 Cargo Barrier**. The **Cargo Barrier** combined with an **MSA 4X4 Storage Drawer System** has been ADR crash test certified.

Compliant to ADR Crash Test Standard: AS/NZS 4034.2:2008.

To meet ADR compliance, the installation must utilise all the **Cargo Barrier** components, combined with the **Storage Drawers System**.


The second bolt down from the top can double as an **Cargo Barrier** and a Child Restraint mounting point.



* ONLY applies to wagon model vehicles. MSA Cargo Barriers available for select vehicles.

FITTER'S QUICK INSTALL GUIDE


- 1.** Prepare the vehicle by removing the tub liner, if one is installed.
- 2.** Clean, vacuum and wipe down the tub.
- 3.** Install Additional Cross Chancel with spacers into Storage Drawer Module (see page 8).
- 4.** Join Storage Drawer Modules with join kit bolts and tighten.
- 5.** Prepare both Storage Drawer Modules by attaching Wing Brackets as per diagram (see page 9).
- 6.** Install the base Trim Panels into the tub.
- 7.** Place the joined Storage Drawer Modules into the tub.
- 8.** Fit Wing Panels to give indication of Storage Drawer Modules position.
- 9.** Centre the Storage Drawer Modules in the vehicle.
- 10.** Drill and prepare the tub as per dimensions (see page 8).
- 11.** Install all fitting bolts and spacer blocks (see page 8).
- 12.** Tighten all fitting bolts to specified torque tensions.
- 13.** Do any wiring required for power supply to Storage Drawer Modules.
- 14.** Re-install Storage Drawers into Modules.
- 15.** Check that Storage Drawers function correctly.
- 16.** Install the large Storage Drawer Module Top Panels.
- 17.** Install Top Panel front trim and install Wing Panel trims.

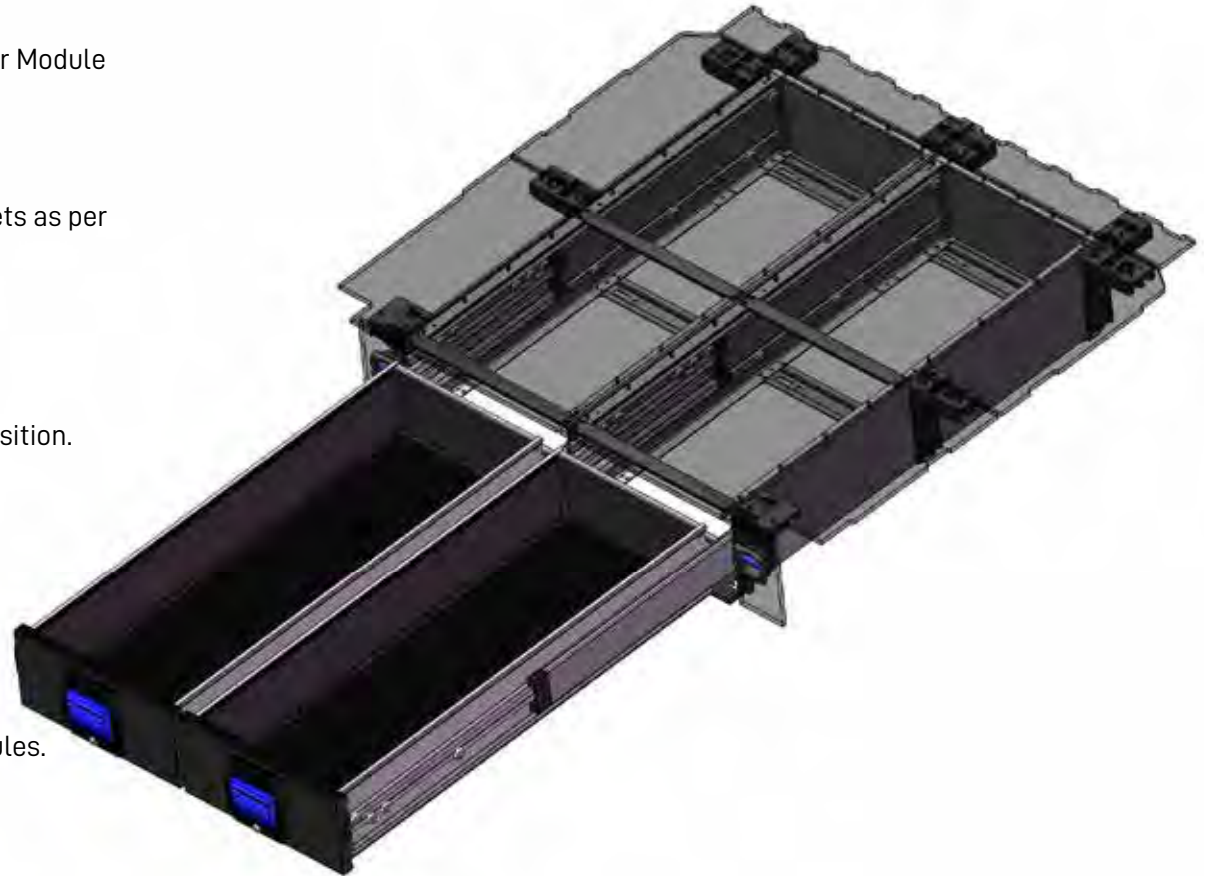




FITTING DIAGRAM

NOTE: Measurements are in millimetres

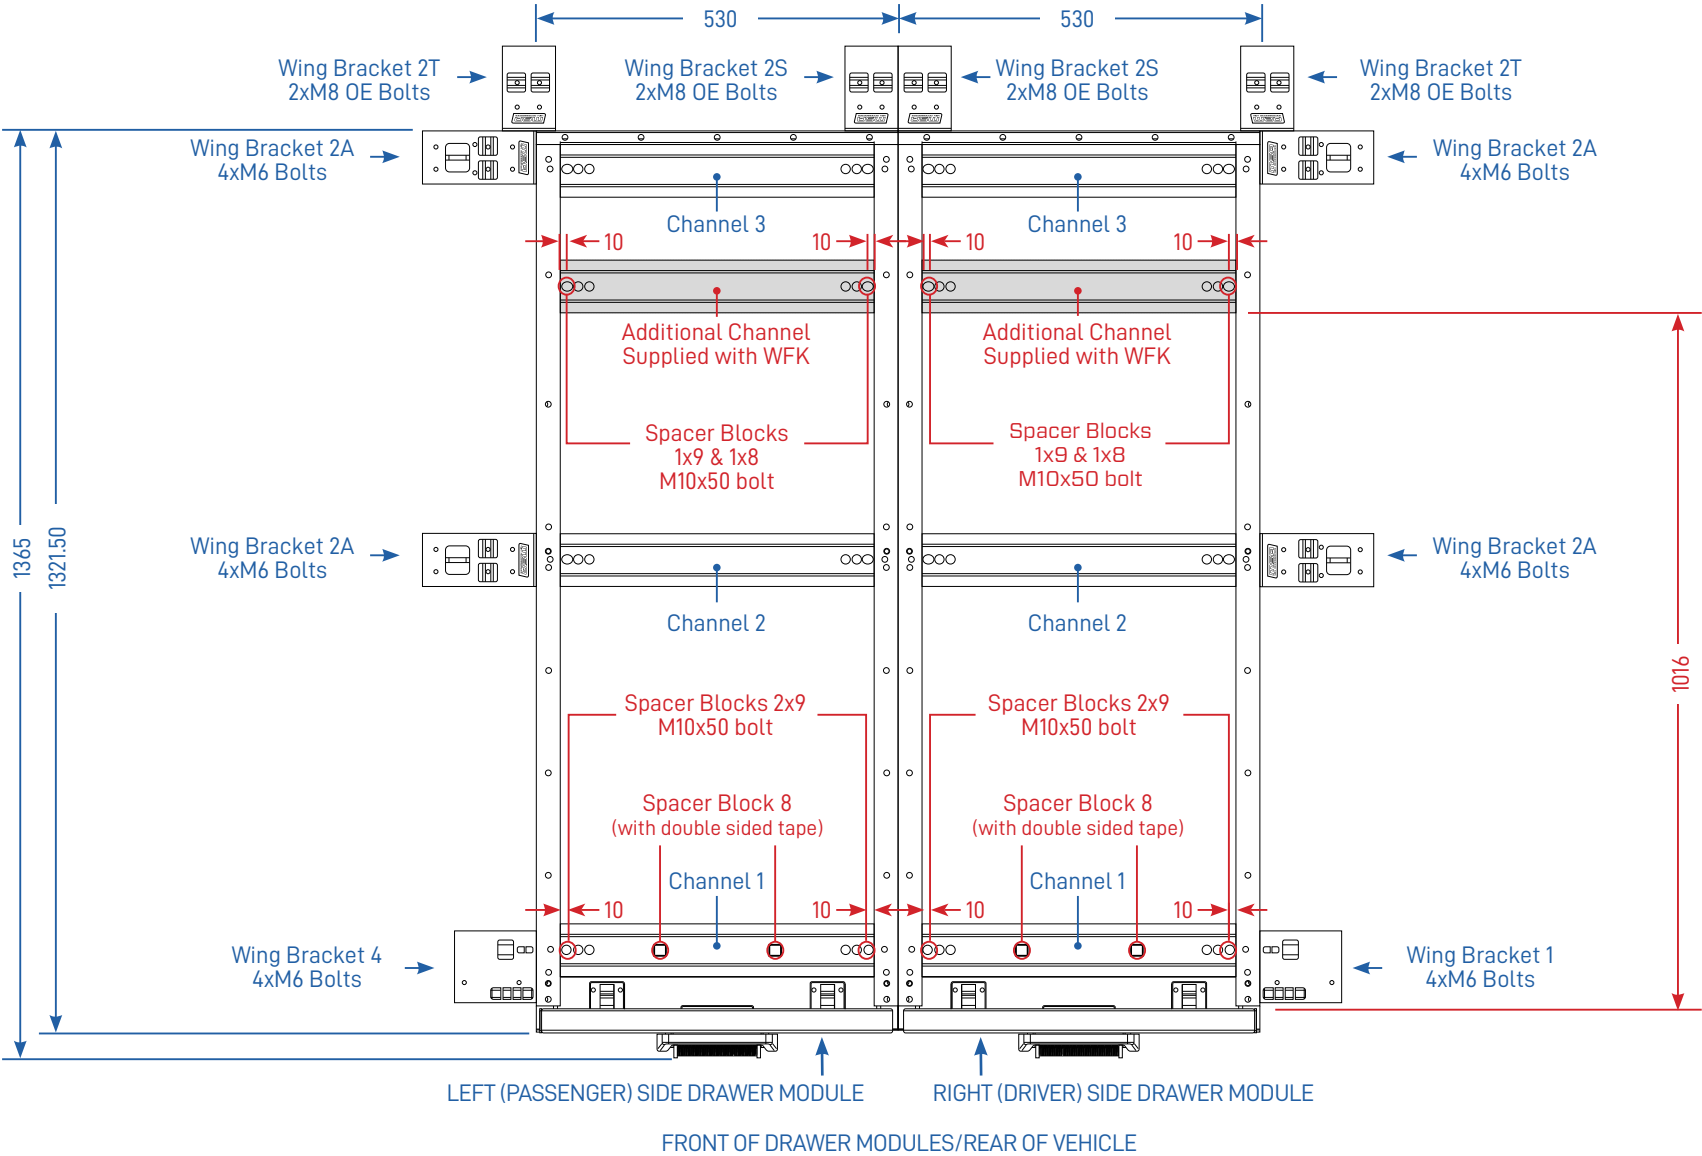

BRACKET POSITIONS

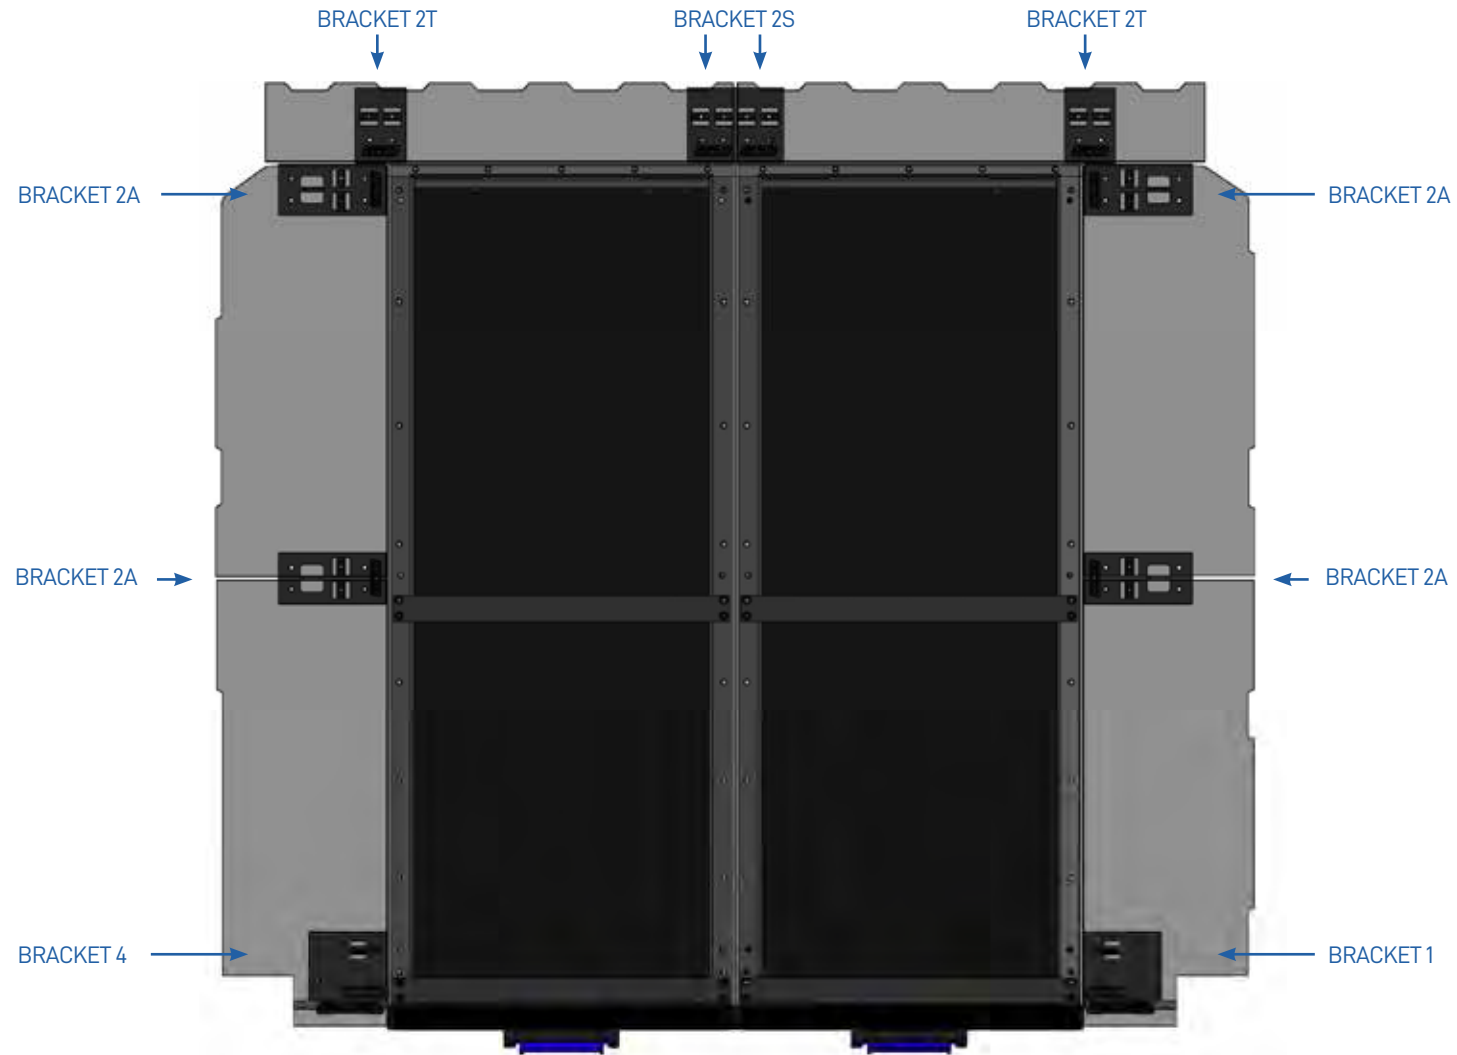

DRAWER PREPARATION


✓ PLEASE NOTE

DRAWER PREPARATION REQUIRES THE DRAWER TO BE OPEN TO FULL EXTENSION. A LONG FLAT SURFACE IS REQUIRED FOR THIS PREPARATION. A CORDLESS DRILL, HEX BIT TO 1/4 AND 3/8 DRIVE SOCKET ADAPTERS, A SET OF 1/4 AND 3/8 DRIVE HEX HEAD BITS AND A SET OF METRIC SPANNERS ARE RECOMMENDED FOR INSTALLATION EASE.

1 DRAWER REMOVAL

Remove one **Drawer Module** from its packaging and place on a flat surface – a 2.4m flat bench is recommended.

Remove the carpeted **Top Panel** by removing the **Countersunk Allen Head Bolts**. Use a drill with a, 1/4 drive adapter and 1/4 drive 4mm **Hex Head Socket Bit**. Set the **Panel** aside.

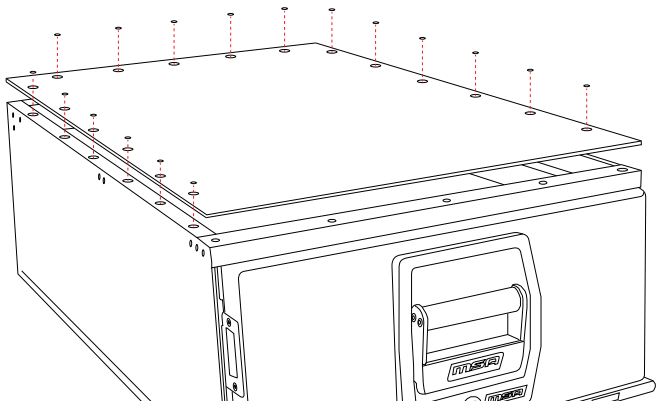


To remove the **Drawer**, pull the **Drawer** out to 3/4 extension. Support the end of the open **Drawer** near the lock with a corner piece of packing from the box.

Access to the internal workings of the **Storage Drawer System** is now possible. Remove the two black injection moulded **Guide Stopper Blocks** by removing the four **Allen Head Bolts** in each block. This is best done with a small hex bit attached to a flexible drive shaft and a cordless drill.



Once both blocks are removed, the **Drawer** can now be pulled out onto the **Brass Contacts** and the middle **Extrusions** on each side of the **Drawer** can be carefully slide forward. The **Drawer** is free to be lifted clear of the **Drawer Module Frame**.

The **Drawer** can now be moved away, taking care not to allow the loose centre **Extrusions** to run out. Place the **Drawer** on two pieces of the angled cardboard packing from the box. This helps to protect the **Brass Rollers** at the rear and the **Lock Mechanism**.

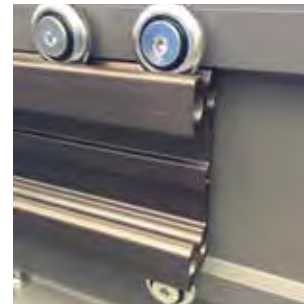

DOUBLE DRAWER INSTALLATION

2 ADDITIONAL CROSS CHANNEL INSTALLATION


An additional cross channel is required to be installed prior to placing the **Drawer Modules** into the vehicle. The additional **Cross Channel** is supplied in the kit. (see fitting diagram in page 8 for cross channel position).



3 ADDITIONAL SPACER INSTALLATION

Cross Channel 1 (see fitting diagram in page 8 for Cross Channel position), requires an additional four **Rectangle Spacer Washers** placed between the **Cross Channel 1** and the **Drawer Module(s)**. Remove the existing four **Hex Head Bolts, Nuts, Spring, Flat and Rectangle Washers** from each end of **Cross Channel 1**. Set aside the **Nuts, Spring, Flat and Rectangle Washers** for re-installation.

To reinstall **Cross Channel 1**, place the additional four **Rectangle Washers** between the **Drawer Module(s)** and at each end of **Cross Channel 1**. Replace the existing **Hex Head Bolts**, with the

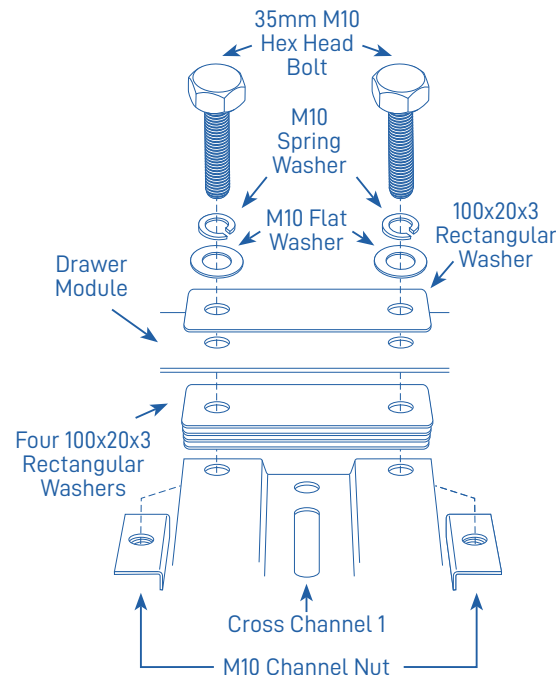


supplied **35mm Hex Head Bolts** and pass through the **Drawer Module** with a **Spring, Flat and Rectangle Washer** from the top. Attach the **Nut** from below and tighten at each end of **Cross Channel 1**.



4 JOINING THE STORAGE DRAWER MODULES

To join the **Drawer Modules** together use the supplied eight **Allen Head Bolts** and **Nyloc Nuts**. Align the Modules. Place a **Allen Head Bolt** through the top front and rear holes. Place the **Nyloc Nut** on the end of the **Bolt** on the other side of the **Frame**.

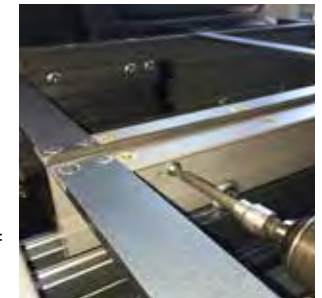

Ensure the tops of the **Modules** and the front black aluminium bases are perfectly level. Using a drill with a **M5 Hex Head Socket Bit** and a 13mm spanner, tighten the front top **Allen Head Bolt** and **Nyloc Nut**. Repeat for the rear top **Allen Head Bolt** and **Nyloc Nut** followed by the remaining two **Allen Head Bolts** and **Nyloc Nuts**.

Follow the same procedure for the bottom **Allen Head Bolts** and **Nyloc Nuts**.

DOUBLE DRAWER INSTALLATION

5 ATTACHING THE WING BRACKETS

Position **Wing Bracket 1** (*driver side*) and/or 4D (*passenger side*) to the front of the **Drawer Module** as per diagram on page 9. Working from the inside of the **Drawer**, insert the four **M6 Hex Head Bolts** with **Flat** and **Spring Washers** through the pre-drilled holes. Loosely tighten with a 10mm socket and extension bar. Once all four **Bolts** are finger tight, align the **Wing Bracket** so it is level with the top of the **Drawer Module**. Tighten all the **Bolts**.

Position a **Wing Bracket 2A** to the middle of the **Drawer Module** as per diagram on page 9. Follow the previous install procedure to attach the **Bolts**.

Position a **Wing Bracket 2A** to the rear of the **Drawer Module** as per diagram on page 9. Follow the previous install procedure to attach the **Bolts**.




To install **Wing Bracket 2T** at the back of the **Drawer Module**, first remove the top two **M8 High Tensile Allen Head Bolts** from the top of the **Frame**.

Position **Wing Bracket 2T** to the outside back of the **Drawer Module** as per diagram on page 8. **Wing Bracket 2T** is positioned off the side of the **Drawer Module**, overlapping the **Wing Bracket 2A** at the rear. Placing this **Bracket** flush with outside of the **Drawer Module** will cause alignment issues with the **Wing Panels**. Re-install with the previously removed two **M8 High Tensile Allen Head Bolts**.

Position **Wing Bracket 2S** to the inside back of the **Drawer Module** as per diagram on page 9. Follow the

previous install procedure to attach the **Bolts**.

Ensure that **Wing Bracket 2S** is positioned flush with the inside edge of the **Drawer Module**. Tap into the correct position with a rubber mallet if needed.

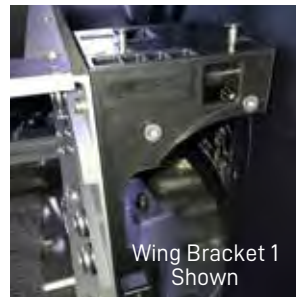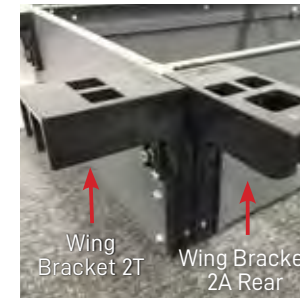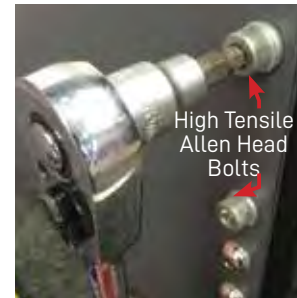

✓ PLEASE NOTE

THE 2X REAR TIE DOWN BRACKETS WILL NEED TO BE REMOVED FROM INSIDE THE VEHICLE'S TUB, BEFORE INSTALLING THE STORAGE DRAWER MODULES INTO THE VEHICLE. USE A T40 TORX BIT TO REMOVE THE BOLTS. LOCTITE IS USED TO SECURE THE BOLTS, BE CAREFUL NOT TO STRIP THE BOLT HEAD.



DOUBLE DRAWER INSTALLATION

6 PLACING THE STORAGE DRAWER MODULES IN THE VEHICLE

Centralise both **Trim Panels**, and position 30mm back from the front edge of the tub. Mark the tub through the existing countersunk holes (*1 at each end*) in the **Trim Panels** and then remove. Drill a pilot hole with a 4mm drill bit, followed by a 9mm drill bit. Vacuum to remove any shavings. Paint the exposed metal of the newly drilled holes to seal the metal and to prevent corruptions. Insert the supplied **Rivet Nuts** into the four holes. (*Rivet Nut Gun with M6 attachment required to compress the Rivet Nuts*). Reposition the **Trim Panels** back into the tub so the countersunk holes align with the **Rivet Nuts** and attach with the supplied **M6x25 Countsunk Bolts**.



With assistance, carefully place the **Drawer Modules** into the vehicle. Adjust so the **Drawer Modules** are positioned roughly in the middle.


7 ATTACHING THE TOP WING PANELS

Remove the **Top Wing Panels** from the box. Attach the two **Black C Clips** to the bottom side of each **Top Wing Panel** by screwing the two **Allen Head Bolts**. Firmly tighten without crushing the clip. Place the **Top Wing Panels** into place.



8 ALIGNING THE DRAWER MODULES WITHIN THE VEHICLE

To centralise the **Drawer Modules** within the vehicle, measure the distance between the **Drawer Modules** and the vehicle tub on both sides. Reposition so the **Drawer Modules** sit an equal distance between the vehicle tub on both sides. Ensure the gap between the **Wing Kit Panels** and the tub of the vehicle are even.

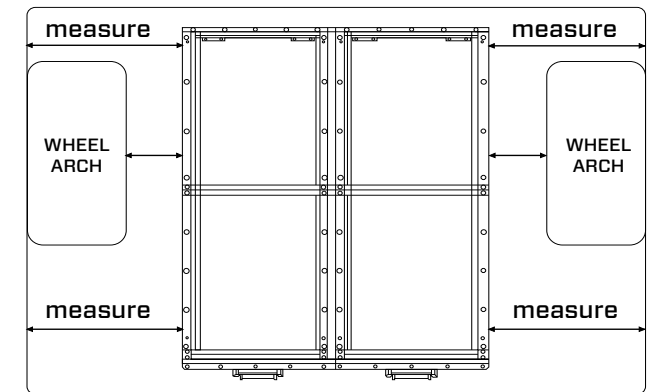

REAR OF VEHICLE



DOUBLE DRAWER INSTALLATION

9

ATTACHING THE STORAGE DRAWER MODULES

To attach the **Drawer Modules**, holes will need to be drilled through the vehicle tub. Ensure that the **Drawer Modules** have not moved. Start from the outside. Mark the drill holes, using the existing holes in the newly installed **Additional Cross Chanel** and **Cross Chanel 1**, as a guide, onto the valley of the vehicle tub (see page 8 for measurements).

Drill pilot holes through the vehicle tub, using a 6mm drill bit. Widen the hole with a 11mm drill bit. This will allow for a small clearance for the **High Tensile Allen Head Bolt**. Vacuum to remove any shavings. Paint the exposed metal of the newly drilled holes to seal the metal and to prevent corrosion.

Place a **Spacer Block 9** and a **Spacer Block 8** (no tape) between the vehicle tub and the **Additional Cross Chanel** and two **Spacer Block 9's** between

 **PLEASE NOTE**
THESE MEASUREMENTS ARE VERY SPECIFIC, PLEASE MEASURE ACCURATELY. BEFORE DRILLING, CHECK UNDER THE VEHICLE FOR ANY WIRING OR FUEL LINES.




the vehicle tub and **Cross Chanel 1** (see page 8). Utilising the **High Tensile Allen Head Bolt**, place a **Flat** and **Rectangular Washer** over the bolt. Pass the assembly through the pre-drilled slots in **Cross Chanel 1**, the **Spacer Blocks** and previously drilled hole in the vehicle tub. With assistance place a Foam Backed Flat Washer (foam side up), **Flat Washer** and **Nyloc Nut** onto the end of the **Allen Head Bolt** from below and hand tighten **ONLY** at this point.

Repeat the drilling and bolt install process for the inside bolts joining the **Drawer Modules** to the vehicle tub in the **Additional Cross Chanel** and **Cross Chanel 1** (see page 8).

For extra support, two **Spacer Block 8's** (with tape) are required under **Cross Chanel 1**. Remove the film off the double sided tape. Place the two **Spacer Block 8's**, tape side up, on top of the ridges in the vehicle tub. Lift the front of the **Drawer Module** and slide the **Spacer Block 8's** into the centre of **Cross Chanel 1**. Place the **Drawer Module** back down.

Tighten the bolts with a torque wrench, down to 30ftlb.

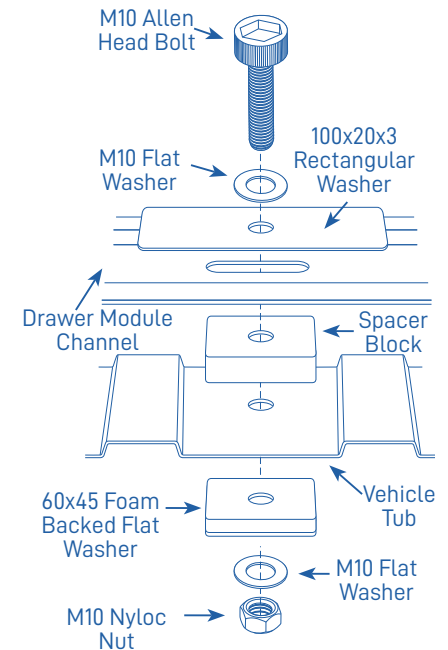

DOUBLE DRAWER INSTALLATION

10 WIRING THE STORAGE DRAWER MODULES

Connect the supplied **Joining Wire** under the base of the **Storage Drawer Modules**, ensuring the fuse is accessible behind the removable **Front Panel**.

Please be sure to cable tie or tape these wires out of the way of the sliding drawer base.



Check that the power supply to the **Storage Drawers** is functional using an electrical tester on the brass electrical contacts on top of the front black aluminum base.

It is now a good time to wipe out the Aluminium channels and roller bearings and give them a small spray of WD40 lubricant.


This does not get done in the assembly process as it can attract grit from the installation process.



11 DRAWER RE-INSTALLATION

Remove the fuse in the power supply to the **Drawer Modules**, as allowing the **Drawer Frame** to touch the **Main Frame** may blow the fuse. The best way to re-install the **Drawer** into the **Drawer Module** is to rest the two brass rollers at the rear base of the **Drawer** onto the end of the contacts on the **Drawer Module Base Frame**.

Then, hold the **Drawer** parallel with the **Frame** and then slide the two centre slide extrusions in to the roller bearings.

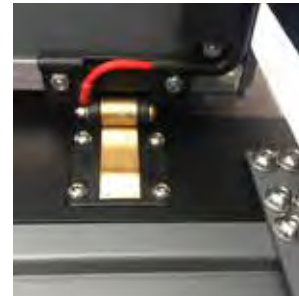

After the centre extrusion has passed the middle roller bearings, the rear stopper blocks can be re-installed by placing the blocks in the aligning holes and tightening the four **M4 Allen Head Bolts** on each side. Please ensure all these bolts have the **M4 Spring Washers** installed. Do not over-tighten these bolts, just firm is enough (*a 7-9 on the screw clutch setting on a cordless drill is a good guide*). Repeat this process for the second drawer.



PLEASE NOTE

LHS BRASS ELECTRICAL CONTACT IS POSITIVE (+)
RHS BRASS ELECTRICAL CONTACT IS NEGATIVE (—)

DOUBLE DRAWER INSTALLATION

The fuse to the power supply can now be installed and the drawer LED strip lights check for function.

Check that the power supply to the drawers is functioning correctly. Open the drawer to full extension so that the brass electrical contacts, under the rear of the drawer frame, make contact. Check switch function. The LED Strip inside the drawer should light up. Push the drawer back in to the frame, the LED light will immediately switch off, this prevents the light from being left on, accidentally.


With a dry, clean cloth, wipe the aluminium channels clean and spray lightly, with a dry silicone lubricant. The production and install process, may attract dirt and grit to the channels that may effect drawers' performance and function.

12 TOP PANEL INSTALLATION


The **Top Panels** can now be installed back onto the **Drawer Modules**. Place the panel in position and locate a **M6 Bolt Thread** in each corner of the top.

Ensuring the four corner bolts have started, the remaining **M6 Countersunk Allen Head Bolts** can now be re-installed and tightened. These need only enough torque to pull the bolt head down to carpet level.

✓ **PLEASE NOTE**
A VERY LOW 3 TORQUE SETTING ON A CORDLESS DRILL IS ENOUGH TO TIGHTEN THESE BOLTS.

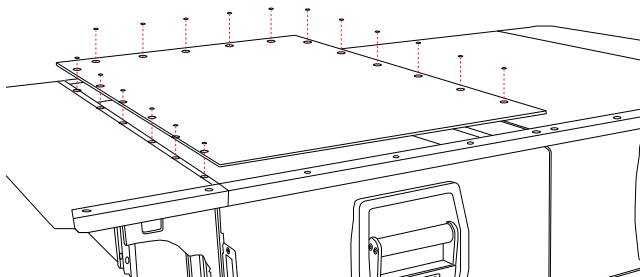

The double width top panel trim can now be installed, this is held into place with **Countersunk Self-Tap Screws**. Push the trim firmly over the end of the double carpeted **Top Panels** and centralise. Screw a **Countersunk Self-Tap Screw** to each end of the trim to secure it into place, taking particular care to install them in a perfect vertical line.

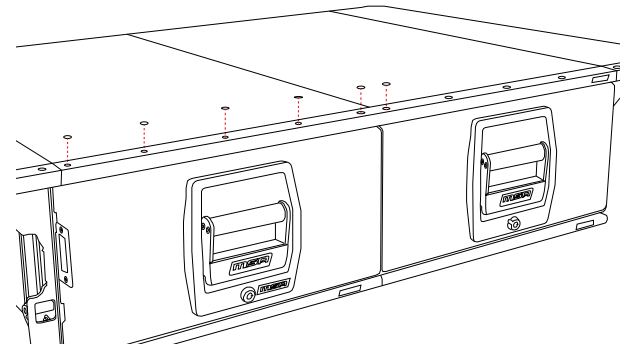

13 REINSTALL ALL WING PANELS

The matching wing panel trims can now be installed using the same process.




DRAWER REMOVAL

14 REMOVING THE DRAWERS AFTER INSTALLATION

MSA Storage Drawer Systems are designed to allow the easy removal of the **Drawers** from the **Frames**, without removing the **Top Panels** of the system.

Open the **Drawers** to full extension, so the '**Stay Open**' contacts engage at the underside rear of the drawer.

Remove the fuse from the power supply to the **Drawers**.

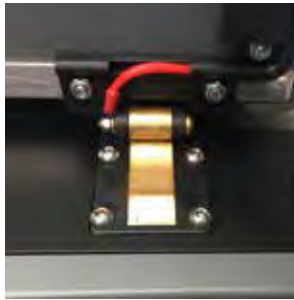

On each side of the sliding frame is a black injection moulded stopper block. With a small screwdriver, pry the end cap away from the block, taking care not to mark the cap. This gains access to four **M4 Allen Head Bolts**.

Remove the four bolts on each side with a hex bit, taking care not to lose the washers.

After the two blocks have been removed, the two middle pieces of the over extension slide can be slid back into the frame and out of the way.

The drawer is now completely free from the frame and just resting on the contacts. It can be lifted away from the frame.

To re-install the drawers, follow the removal procedure in reverse. Align the middle sliding extension being careful to not cause any marking.

Sit the drawer rollers on the two contacts at the front of the frame.

Push the drawer three quarters of the way in to the middle slide extension while pulling the extensions out forward towards the front of the drawer frame. The stopper blocks can now be installed in both sides, taking care not to over-tighten. When all 8 bolts are installed and tightened, then replace the two end caps.

Replace the fuse in the power supply.



MAINTENANCE AND OPERATION

15 CARE AND MAINTENANCE

Clean any exposed parts regularly to ensure that bearings and bearing tracks remain free from dirt, sand and grit. Spray bearings with a dry silicon lubricant.

Wipe down powder coated Aluminium extrusions with clean, warm, soapy water using a soft cloth. Do not use harsh chemicals or thinner based cleaners on a **MSA Storage Drawer System**.

If Aluminium Panels are gouged, chipped or scratched, try touching up the damaged area with closely matching paint.

The LED Strip Light is designed to turn on at full extension. If the LED strip does not light up on full extension:

- Check power supply.
- Check the brass contacts are clean underneath the rear of the drawer.
- Check that the fuse in the fuse block is ok.

Carpet can be vacuumed or wiped with a wet sponge.

Trim can be touched up with a black permanent marker pen.



16 OPERATING INSTRUCTIONS

Open the Storage Drawer: Turn the supplied key to the right, then remove the key and pull on the blue Aluminium handle. This will release the drawer from the frame.

Turn on the LED strip light: Pull the drawer out to full extension. The drawer will roll over the first (small stage) of an electrical bumper to supply power to the LED strip light.

Keep the Storage Drawer open on a slope: Pull the drawer out a little further, the electrical contact will remain working and the drawer will then roll onto a stronger stage bumper which is the patented stay open/electrical contact device. This will keep the drawer open.

Turn off the LED strip light: The LED strip light can be turned off by the recessed switch on the outer side of the front panel. The LED strip light will only work when the drawer is fully open. This prevents leaving the light on and closing the drawer.

Close the Storage Drawer: A small push on the drawer face will push the drawer rollers over the stay open device. Pulling the handle is not required. Turn the supplied key to the left to lock the drawers while the vehicle is moving.



MSA 4X4 WARRANTY



Address:

43 Harrington Street,
Arundel QLD, 4214

ABN: 50 150 429 566

Phone:

+61 7 5594 6664

Email:

warranties@msa4x4.com.au

Website:

msa4x4.com.au

All MSA 4X4 Accessories products are designed and manufactured to the highest quality standards to perform as they should. We stand behind our products with a Lifetime Manufacturer's Warranty. All claims under this warranty should be made by returning the product at your cost to MSA 4X4 Accessories Pty Ltd, 43 Harrington Street, Arundel, QLD 4214, with the detail of the fault, proof of purchase, proof of identification and vehicle fitment details where relevant. Lifetime manufacturer's warranty applies to the original purchaser only.

If we determine that an MSA 4X4 Accessories product is defective in materials or workmanship during the Lifetime Warranty, we will either repair or replace the product. Repair or replacement is solely at the discretion of MSA 4X4 Accessories Pty Ltd. This warranty does not apply to failure or damage caused by incorrect or faulty fitment, accidental or intentional damage, misuse or abuse, failure of other products, operation of the product outside of its environmental or technical specifications, or repair or modification carried out by anyone other than MSA 4X4 Accessories Pty Ltd. No charges will be accepted for external labour or materials.

Lifetime warranty applies to all MSA 4X4 Accessories Fridge Slides, Fridge Barriers, Storage Drawers, and steel or aluminium products, excluding MSA 4X4's Driving Mirrors & Power Panels. MSA 4X4 Accessories Lifetime warranty does not cover any coating faults, rust, scratches, chips, carpet or battery packs. Fabric product Lifetime Warranty covers all manufacture and fabric components. Lifetime Warranty will not cover any fading of fabrics.

MSA 4X4 Accessories products are designed for lifestyle applications. Due to the harshness of the mining environment,

MSA 4X4 Accessories products used in mining applications that may be operating outside of their environmental and technical specifications are therefore excluded from a Lifetime Warranty. MSA 4X4 Accessories products used in mining applications are warranted for up to 1 year.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

DISCLAIMER

MSA 4X4 Accessories Pty Ltd is not liable to the buyer in contract or in tort arising out of, or in connection with, or relating to; (a) the performance of this product or any breach of these conditions; or (b) any fact, matter of thing relating to this product; or any error (whether negligent or in breach of contract or not) in information supplied to the buyer or a user before or after the date of the purchaser's or user's use of this product.



MSA

4X4 ACCESSORIES

f y i MSA4X4.COM.AU | GEAR FOR LIFE